


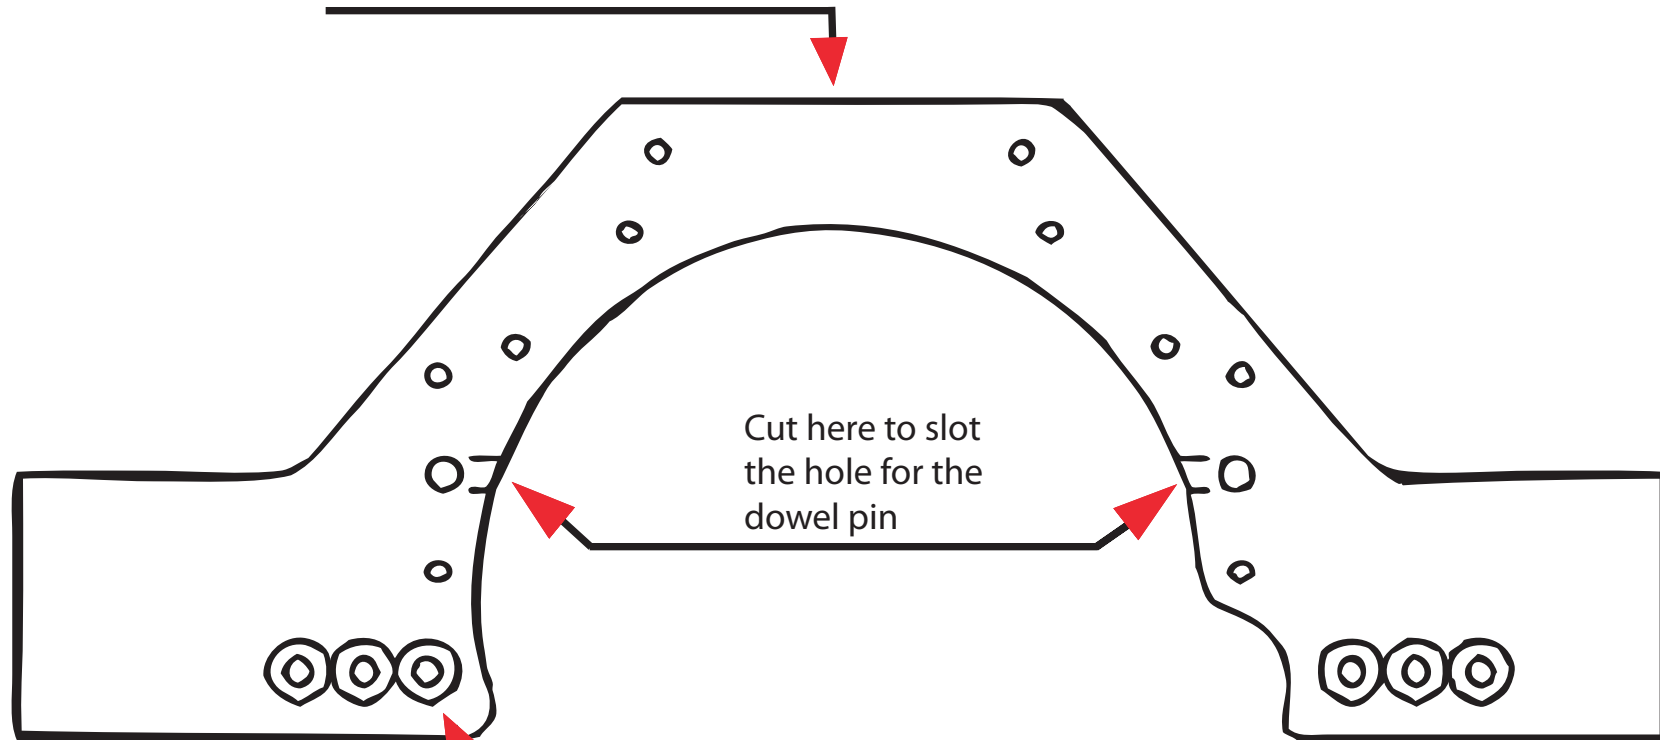

This plate may be used as a solid or a two piece mid plate

For Installation without removing the transmission

Cut the plate in half at the marking. Separate the transmission by 1/4 of an inch.
Cut the slot to the dowel pin hole. Rotate the plate 90 deg. and slide it on the dowel pin.
Cut the mounting plate so it will turn and pass by the frame rail and headers.
Use angle iron to mount the plate to the frame as needed.



Break out these washers and use them to space the torque convert back to stock location.
Two sets are supplied.

.187 Thick HRS Steel Plate